

## STEP 2.

### To Install The FM Take-Off Between Antenna and Power Supply.

Attach cable going to power supply to jack on FM Take-Off marked POWER SUPPLY. Attach cable going to antenna to jack on FM Take-Off marked ANTENNA.

OR

### To Install The FM Take-Off Between Power Supply and TV Set.

Attach cable going to TV set to jack on FM Take-Off marked POWER SUPPLY. Attach cable going to power supply to jack on FM Take-Off marked ANTENNA.

**STEP 3.** Plug 12" cable with Motorola plugs into jack marked FM OUT on FM Take-Off, plug other end into antenna jack of FM radio. See Figure 1. Peel paper from one side of mounting adhesive pad and press it firmly onto back of FM Take-Off, peel paper from other side and press onto surface.

The logo features the word "Shakespeare" in a stylized, cursive script font. Above and below the text are thick, solid black horizontal bars. A registered trademark symbol (®) is located to the upper right of the word.

ELECTRONIC PRODUCTS

3801 Westmore Drive, Columbia, SC 29223

Ph: 803.227.1590

FAX: 803.419.3099

The logo features the word "Shakespeare" in a stylized, cursive script font. Above and below the text are thick, solid black horizontal bars. A registered trademark symbol (®) is located to the upper right of the word.

ELECTRONIC PRODUCTS

## FM TAKE-OFF

### STYLE 4358

WARNING: TO REDUCE  
THE RISK OF FIRE OR  
SHOCK HAZARD, DO NOT  
EXPOSE THIS  
APPLIANCE TO RAIN  
OR MOISTURE.

### DESCRIPTION

Shakespeare's Style 4358 is designed to separate FM radio signals from the downlead or TV set lead of the SeaWatch® Series of Shakespeare TV antennas. The 4358 may be attached anywhere in the downlead cable where the unit will be protected from the weather. It will not interfere with regular TV reception. The 4358 may also be installed in the cable between the power supply and the TV set. FM radio signals are available at the female "MOTOROLA" jack.

### SUPPLIED PARTS LIST

- 1 4358 FM Take-Off
- 1 12" Cable assembly, Motorola connectors each end
- 1 Mounting tape, foam adhesive both sides

### INSTRUCTIONS

**STEP 1.** Choose mounting location convenient to FM receiver and antenna downlead or TV set cable. Cut cable and install "F" connectors on each end.

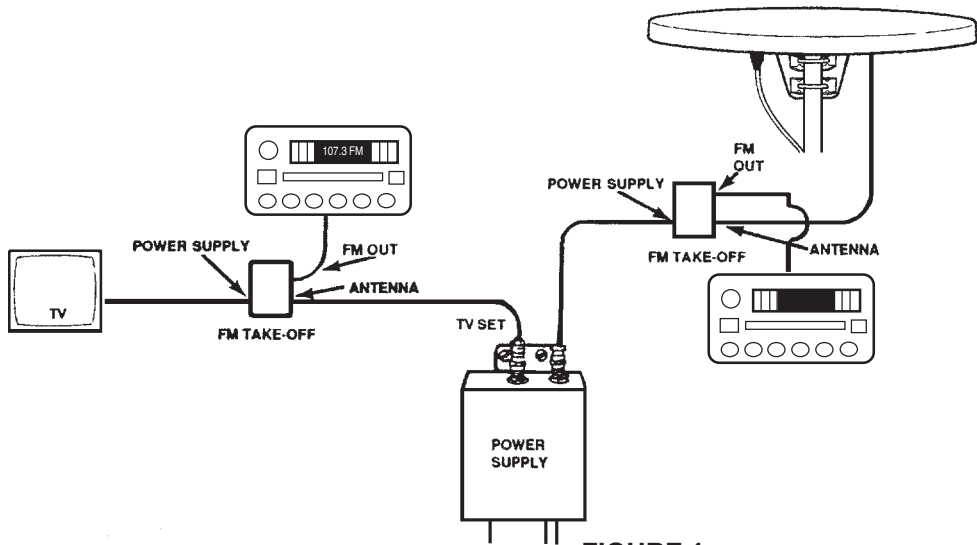


FIGURE 1